

Streamless

Retro-fit waterless urinal system


FITTING INSTRUCTIONS



Original bottle trap



Take bottle trap out

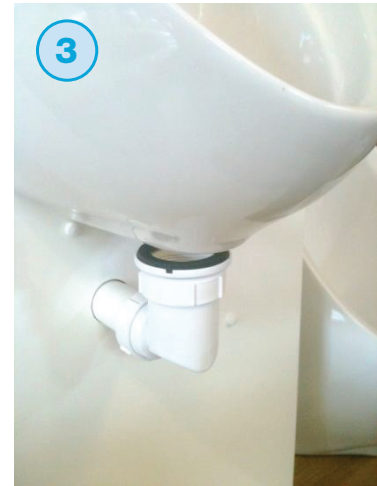


Attach Stream-less trap



One-way valve goes in from above and threads into trap




Adjust telescopic trap & tighten

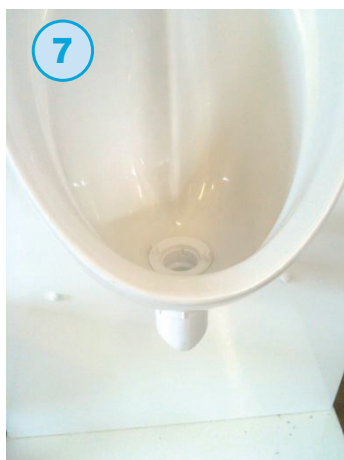

Top view without cartridge



Cartridge sits on top

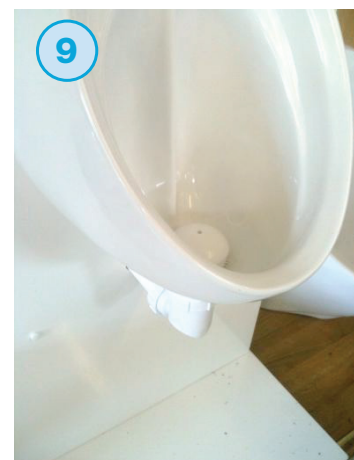

Stream-less fitted -
turn off water!